



MOUNTAIN AROMA DIFFUSER MANUAL

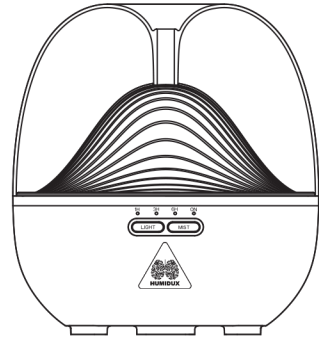

EXCUSIVE STANDARD: GB4706.1-2005

ACCESSORIES

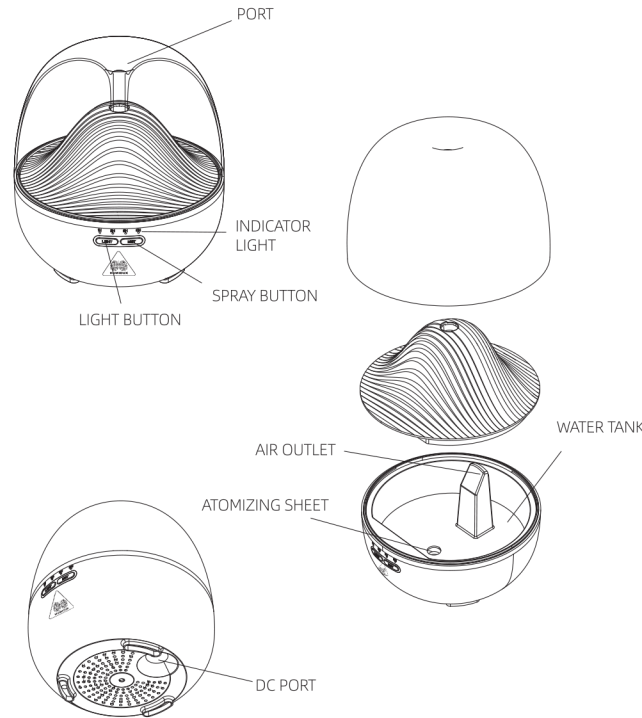

PRODUCT INFOMATION

product parameters:

Product name: Mountain aroma diffuser
 Product net weight: 546g
 Rated voltage: DC 24V
 Ultrasonic frequency: 2.4MHZ
 Application area: 10-30m²
 Executive standard: GB4706.1-2005

Product Size: 17.9*17.9*19.3cm
 Power Supply: Standard Special Adapter
 Output power: 12W
 Water tank capacity: about 600mL
 Main material: ABS/PP/PC/electronic components
 Place of Origin: Shenzhen, China

Frequency: 2.4M

Noise: <36dB

Double protection for water shortage:

Spring detects water: Sensitivity <1s
 No water protection:
 Water shortage protection shutdown,
 Buzzer B-B sound, turn off the machine automatically
 (including spray, indicator light, atmosphere light)

Timing & Indicator

Number of light: 4 pcs
 Light color: Green
 60min : Indicator is on means timing 60+1min
 180min: Indicator is on means timing 180+2min
 360min: Indicator is on means timing 360+3min
 ON : Indicator is on means long-time working

Power ON:

When power on the machine, buzzer B sounds and then machine change into standby mode.

Button:

Number of buttons: 2
 Operation mode: click
 MIST button:

1. Power on and click to turn on, the buzzer will sound "B", and the atomizer will start to work (the default is small fog), the default timing is 60min; the corresponding indicator light is on, and when the timing is up, machine will turn off (including spray, ambient light, indicator) while the buzzer does not sound;
2. Click the button again, buzzer will sound "B", and switch 180min timing, the corresponding indicator light will light up, the timing time is up, machine turns off (spray, ambient light, indicator light) while the buzzer does not sound;
3. Click the button again, buzzer will sound "B", and switch 360min timing, the corresponding indicator light will light up, the timing time is up, machine turns off (spray, ambient light, indicator light) while the buzzer does not sound;
4. Click the button again, buzzer will sound "B", and switch the long-time working status, and the corresponding indicator will light up;
5. Click the button again, buzzer will sound "B-b", and then turn off the machine (including spray, ambient light, indicator light);
6. When the atomizer is working, long press the button to switch the fog size, long press the button and the sound "B" will appear, switch to thick fog, long press again, the buzzer sound "B-B" will appear, switch to the small fog mode, long press again to repeat the action, the atmosphere light constant;
7. When the atomizer is not working in the shutdown state, long press is invalid.

PRODUCT INFOMATION

"LIGHT button (colorful)":

1. Click the button, the buzzer does not sound, the light enters the gradual mode, the gradual sequence is: white-red-purple-blue-cyan-green-yellow, the sequence is different each time, no memory function.
2. Click the button again to fix the current color, and the buzzer does not sound;
3. Click the button again to switch the color sequence: dark blue--bright blue--dark green--bright green--dark red--bright red--dark purple--bright purple--dark yellow--bright yellow--dark blue--bright green--dark white--bright white, the buzzer does not sound every when you click;
4. Click the button again, the ambient light will turn off, and the buzzer B-B will sound;
5. When the ambient light is turned on, press and hold the button for 2s to turn off the light and the buzzer B-B will sound;
6. In the shutdown state, when the ambient light is off, long press is invalid

Remote Control:

ON/OFF

Shutdown state, click the button, buzzer sounds "B", enter 60MIN state, default small fog, non-intermittent mode, timed out, turn off spray, ambient light, indicator light, buzzer does not sound; Power on, click to turn off (spray, ambient light), buzzer will sound "B-B";

Intermittent:

When the machine is working again, click to enter the intermittent mode, buzzer sounds "B", the corresponding indicator flashes at a frequency of 0.5s, the atomizer works for 10s, stops for 10s, cyclically, without memory function, does not affect the timing time;

Continuous:

When the machine is in the intermittent mode, one click will enter the continuous spray mode, the buzzer will sound "B", it does not affect the timing time, and has no memory function.

Timing:

In the power-on state, click the button to enter 180min mode, click again to enter 360min mode; click again to enter ON mode; click again to enter 60min mode;

Big/Small:

In the power-on state, the default is small fog, click the button, buzzer sounds "B", and enter the big fog mode; click the button again, the buzzer sounds "B-B", and enter the small fog mode;

Light:

Power on or off, click the button, the buzzer sounds "B", the ambient light enters the gradual mode, the gradual sequence is: white--red--purple--blue--cyan--green--yellow, each cycle sequence is different, and no memory function

Click the button again to fix the current color and buzzer sounds "B";

Click the button again to switch the color sequence: dark blue--bright blue--dark green--bright green--dark red--bright red--dark purple--bright purple--dark yellow--bright yellow--dark blue--bright blue--dark white--bright white, the buzzer does not sound every time you click; Click the button again, the ambient light turns off and buzzer sounds.



www.humidux.com